QUOTATION

Rosenbauer Minnesota LLC

Page 1

M12743 EXT Defined 196WB MN14917	
Exp. Date: / /	

 Quote No:
 1FDIC2020-0028

 Job/Order No:
 M12743

 CAB:
 RBM4000

Rosenbauer Commander

04/21/2022

04/21/2022			гауе
PART NO	S DESCRIPTION	QTY	ID
	== Rosenbauer Commander - 1115.017 11/15/17 ==	1	RAC2
03-00-0009	XS < > PRICE PROTECTION - DISCOUNT VALID UNTIL:	1	RAC2
03-00-0017	 NO PRICE PROTECTION - FEB 2019 Release Expired 	1	RAC2
03-00-0018	=== Pricing as of Rosenbauer QW Release 2-1-18 Price good untill 9-1-19	1	
	Expired		
03-00-0030	Aluminum Surcharge	1	RAC2
03-00-0031	Frame Surcharge	1	RAC2
03-00-0101	Certification - NFPA	1	RAC2
08-09-0100	Cab Paint Warranty Five Years	1	RAC2
08-09-0104	Cab Structural Warranty Ten Years	1	RAC2
08-09-0105	Transmission Warranty Allison Five Years	1	RAC2
08-09-0106	Engine Warranty Cummins Five Years	1	RAC2
08-09-0107	Frame Warranty Lifetime	1	RAC2
08-09-0109	Front Axle Warranty Hendrickson	1	RAC2
08-09-0109		1	RAC2
08-09-0110	Rear Axle Warranty Meritor - 5 Year	1	RAC2
	Warranty - Cab and Chassis One Year		RAC2
08-09-0301	Cab Test Information Static Load Seat Test	1	
08-09-0302	Cab Test Information Crash Test ECE-29	1	RAC2
08-09-0303	Cab Test Information SAE J2420; J2422	1	RAC2
08-09-0304	Cab Test Information Roof Crush, Side & Frontal Impact	1	RAC2
08-09-0501	Operation & Parts List Manuals (2) Sets, CD	1	RAC2
08-09-0503	Engine & Transmission Operation Manuals (1) Set	1	RAC2
08-09-0530	As Built Wiring w/Plumbing Diagram (1) Set	1	RAC2
08-09-0540	On Board USB Manual Storage	1	RAC2
08-80-0200	DOT KIT	1	RAC2
	VEHICLE TYPE	1	RAC2
03-00-0124	Pumper	1	RAC2
03-00-0140	Standard Crossmembers	1	RAC2
07-03-0102	Midship Pump Jackshaft Only	1	RAC2
03-00-0160	==== No Angle of Approach Requirement ====	1	RAC2
03-00-0162	==== No Angle of Departure Requirement ====	1	RAC2
	CAB	1	RAC2
03-00-0711	60" Cab Length 11" Roof	1	RAC2
03-05-020A	No Driver EMS Cab Compartments, Short Tunnel, Commander	1	RAC2
03-05-029A	No Officer EMS Cab Compartment, Short Tunnel, Commander	1	RAC2
	CAB DOORS	1	RAC2

04/21/2022			Page 2
PART NO	S DESCRIPTION	QTY	ID
03-06-1015	Cab Entry Doors	1	RAC2
03-06-0015	Steps w/Grip Strut Lwr, Treadplate Middle	1	RAC2
03-06-1025	Full Length Cab Entry Doors	1	RAC2
03-06-0021	Step Trim Kickplate, Treadplate	1	RAC2
03-06-1500	No Lower Door Kick Panel (No Overlay)	1	RAC2
03-06-1110	Cab Door Hardware Black (4)	1	RAC2
03-06-1120	Cab Door Locks Manual	1	RAC2
03-06-1135	Interior 1-Piece Door Panel Type Aluminum	1	RAC2
03-06-1206	Door Panel Finish Line-X Black	1	RAC2
03-06-1225	 > Chevron, Reflective, Interior Cab Door - Scotchlite Red/Amber 	1	RAC2
04-05-0112		1	RAC2
	Interior Handle Front Door Grab Handles - Red Powder Coat	1	
04-05-0152	Interior Grab Handle Rear Door Chicago Style 34" Red Powder Coat	1	RAC2
	CAB GLASS	1	RAC2
03-08-0101	Windshield One Piece - COMMANDER	1	RAC2
03-08-0102	Windshield Wiper System Single Motor (2) Wipers - 3D Grille	1	RAC2
08-02-0135	Windshield Wiper Activation Switch on Driver Panel	1	RAC2
03-08-0115	Window Driver w/Manual Regulator	1	RAC2
03-08-0117	Window Officer w/Manual Regulator	1	RAC2
03-08-0200	Window Driver Crew Door w/Manual Regulator	1	RAC2
03-08-0240	Window Officer Crew Door w/ Manual Regulator	1	RAC2
03-08-0300	Window Side Middle Driver Fixed 15.5W" x 21.5"H	1	RAC2
03-08-0350	Window Side Middle Officer Fixed 15.5"W x 21.5"H	1	RAC2
03-08-2500	==== No Rhino Plate Transparent Window Armor ====	1	RAC2
03-00-2300			11402
	CAB INTERIOR AND TRIM	1	RAC2
03-09-8010	Cab Insulation Interior Ceiling	1	RAC2
03-09-8100	Cab Insulation Engine Tunnel, Short Tunnel	1	RAC2
03-09-8013	===No Cab Insulation Fastening Pins===	1	RAC2
03-09-8020	Cab Insulation Cab Damping	1	RAC2
04-01-1075	< Interior Trim Color Gray, 60"- 11" Roof	1	RAC2
04-01-1120	 Interior Trim Color Gray, 60 - 11 (1001) Interior Trim Color Gray Rear Wall 11" Roof 	1	RAC2
04-02-1001	Floor Mounted Throttle and Brake Pedals	1	RAC2
04-02-1105	Interior Floor Covering Color Black, 60"	1	RAC2
04-02-1702	Interior Trim Sun Visor Tinted	1	RAC2
04-02-1702		1	RAC2
05-01-1050	Cab Coating Interior Color Cab Coating Interior Black	1	RAC2
	> CAB DASH AND ENGINE TUNNEL - 60" - SHORT	1	RAC2
04-03-0800	> Cab Dash & Engine Tunnel, Composite Dash - Short Tunnel	1	RAC2
04-03-1022	> Cab Dash & Engine Tunnel Line-X Coating Black	1	RAC2
	CUSTOM CONSOLE	1	RAC2
04 04 4400		4	DACO
04-04-1100	Havis Console	1	RAC2
04-04-1101	Havis Console - Pre Configured	1	RAC2
04-04-1000	Havis Console - Upper Portion	1	RAC2
04-04-U002	Havis Console - Upper Portion - Option 2	1	RAC2
04-04-1134	> Black Plates with (2) Power Point & (1) Dual USB Power Point	2	RAC2
04-04-2L00	Havis Console - Lower Portion	1	RAC2
04-04-L004	Havis Console - Lower Portion - Option 4	1	RAC2
04-04-1116	> Black Blank Plate	1	RAC2
04-04-1146	> Locking Assy Box	2	RAC2
04-04-1161	> Cup Holder, Dual	2	RAC2
08-01-0140	< > Instrumentation Panel Inlay - Job Color	1	RAC2
	CAB HEADER - HEAT AND AC	1	RAC2

04/21/2022			Page 3
PART NO	S DESCRIPTION	QTY	ID
03-08-4000	Cab Header / Heating and AC	1	RAC2
05-02-0010	> Heating w/ Air Conditioning, Overhead, VMUX	1	RAC2
05-01-6010	< Cab Paint A/C Condenser on Roof	1	RAC2
05-02-0047	Heater Hose - Silicone	1	RAC2
05-02-0200	A/C Condenser Location Roof Mount Mid Center	1	RAC2
08-02-0121	Heat & A/C Activation VISTA, Rear Crew Manual	1	RAC2
08-02-0100	Rear Crew Controls Manual - Located Overhead Center	1	RAC2
	SEATS	1	RAC2
03-09-0105	Seat Color Black/Red Seat Belt	1	RAC2
03-09-0183	 > Seat Driver 911 Seats Inc 10-Way Electric ABTS 	1	RAC2
03-09-000A	Single Retractor Seat Belt - Seats Inc	1	RAC2
03-09-0121	Seat Back Non-SCBA	1	RAC2
03-09-0218	Seat Mounting Driver Electric Seats Inc	1	RAC2
03-09-0902	Seat Mounting Driver Electric Seats inc	1	RAC2
03-09-0920		1	RAC2
03-09-3010	Seat Logo Rosenbauer	1	RAC2 RAC2
	Driver Seat Box Storage Compartment	-	
03-09-3236	> Seat Box Driver & Officer Storage Access Doors (2) Driver/Officer	1	RAC2
03-09-0231	> Seat Officer 911 Seats Inc 2-Way Manual ABTS	1	RAC2
03-09-000A	Single Retractor Seat Belt - Seats Inc	1	RAC2
03-09-0119	Seat Back SCBA Center Cushion Release W/ Zico EZ LOC	1	RAC2
03-09-0282	Seat Mounting Officer 2-Way Seats Inc	1	RAC2
03-09-0310	==== No Parade Panels ====	1	RAC2
03-09-0902	Seat Material Turnout Tuff	1	RAC2
03-09-0920	Seat Logo Rosenbauer	1	RAC2
03-09-3020	Officer Seat Box Storage Compartment	1	RAC2
03-09-0330	Two (2) Outboard Rear Facing Seats	1	RAC2
03-09-0351	< Seat Crew Rear Facing Outer 911 Seats Inc Flip-Up ABTS	2	RAC2
03-09-000A	Single Retractor Seat Belt - Seats Inc	2	RAC2
03-09-0119	Seat Back SCBA Center Cushion Release W/ Zico EZ LOC	2	RAC2
03-09-0310	==== No Parade Panels ====	2	RAC2
03-09-0380	Seat Mounting Rear Facing Outer	2	RAC2
03-09-0902	Seat Material Turnout Tuff	2	RAC2
03-09-0920	Seat Logo Rosenbauer	2	RAC2
03-09-0415	Two (2) Center Forward Facing Seats	1	RAC2
03-09-0551		2	RAC2
03-09-000A		2	
	Single Retractor Seat Belt - Seats Inc Seat Back SCBA Center Cushion Release W/ Zico EZ LOC		RAC2
03-09-0119 03-09-0310		2	RAC2 RAC2
03-09-0575	=== No Parade Panels ====	2	RAC2 RAC2
03-09-0902	Seat Mounting Forward Facing Center		
	Seat Material Turnout Tuff	2	RAC2
03-09-0920 03-09-3100	Seat Logo Rosenbauer Seat Box (2 person) Forward Facing	2	RAC2 RAC2
03-09-3100	Seat Box (2 person) Forward Facing		NAU2
03-09-3200	> Seat Box (60/54) Forward Facing Storage Access Cutout (1) Center	1	RAC2
	Forward		
03-09-4001	Seat Box Finish - Match Cab Interior Coating	1	RAC2
	CAB EXTERIOR	1	RAC2
04-05-1900	Exterior Grab Handles 18" Aluminum	1	RAC2
04-05-1900	Exterior Grab Handles Bare Aluminum	1	RAC2
04-05-2000	Exterior Grab Handles Aluminum with Stanchions 18"	1	RAC2
04-05-2000	Exterior Grab Handles Stainless Steel Scuff Plate 18"	1	RAC2
01002000			10.02
	CAB FRONT FASCIA	1	RAC2

PART NO S DESCRIPTION QT 04-08-0010 ===== Traditional Front with Rectangular Headlamp Bezels ===== 04-08-0140 Front Grille, 3D Stainless Steel 04-08-0140 Front Grille, 3D Stainless Steel 04-08-0022 Wing Light Bezel - Stainless 04-08-0022 Wing Light Bezel - Stainless 04-08-0022 Wing Light Bezel - Stainless 04-08-0022 Front Grille Mount 04-08-0022 Front Grille Inlay, Black Honeycomb w/ stainless steel bars 04-08-0125 Front Grille Inlay, Black Honeycomb w/ stainless steel bars 06-03-2010 Fluid Checks & Fills at Grille L9 08-00-0503 Headlights, Quad, with Rectangular Bezel 08-00-0503 Headlight Location - Upper Bucket 08-00-0503 Front Turn Signals Whelen M6 LED (2) 08-00-0603 Front Turn Signal Located Below Headlights 08-00-0603 Front Marker Light LED (2) 08-00-0606 Front Marker Light Activated Rocker Switch Driver Panel 08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel 08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel 08-01-0303	1 1 1 1 1 1 1 1 1 1 1 1	RAC2 RAC2 RAC2 RAC2 RAC2 RAC2 RAC2 RAC2
04-08-0140 Front Grille, 3D Stainless Steel 04-08-0022 Wing Light Bezel - Stainless 04-08-0090 Logo, Rosenbauer, Grille Mount 04-08-0125 Front Grille Inlay, Black Honeycomb w/ stainless steel bars 06-03-2010 Fluid Checks & Fills at Grille L9 08-00-0503 Headlights, Quad, with Rectangular Bezel 08-00-0540 <> Headlight Location - Upper Bucket 08-00-0603 Front Turn Signals Whelen M6 LED (2) 08-00-0606 Side Marker Light LED (2) 08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner) 08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1 1 1 1 1 1	RAC2 RAC2 RAC2 RAC2 RAC2 RAC2
04-08-0140 Front Grille, 3D Stainless Steel 04-08-0022 Wing Light Bezel - Stainless 04-08-0090 Logo, Rosenbauer, Grille Mount 04-08-0125 Front Grille Inlay, Black Honeycomb w/ stainless steel bars 06-03-2010 Fluid Checks & Fills at Grille L9 08-00-0503 Headlights, Quad, with Rectangular Bezel 08-00-0540 <> 04-08-0125 Headlight Location - Upper Bucket 08-00-0603 Front Turn Signals Whelen M6 LED (2) 08-00-0606 Side Marker Light LED (2) 08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner) 08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1 1 1 1 1 1	RAC2 RAC2 RAC2 RAC2 RAC2 RAC2
04-08-0022 Wing Light Bezel - Stainless 04-08-0090 Logo, Rosenbauer, Grille Mount 04-08-0125 Front Grille Inlay, Black Honeycomb w/ stainless steel bars 06-03-2010 Fluid Checks & Fills at Grille L9 08-00-0503 Headlights, Quad, with Rectangular Bezel 08-00-0540 <> 08-00-0603 Front Turn Signals Whelen M6 LED (2) 08-00-0630 <> 08-00-0606 Side Marker Light LED (2) 08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner) 08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1 1	RAC2 RAC2 RAC2 RAC2 RAC2
04-08-0090 i Logo, Rosenbauer, Grille Mount 04-08-0125 i Front Grille Inlay, Black Honeycomb w/ stainless steel bars 06-03-2010 i Fluid Checks & Fills at Grille L9 08-00-0503 i Headlights, Quad, with Rectangular Bezel 08-00-0540 <> 08-00-0603 i Headlight Location - Upper Bucket 08-00-0603 i Front Turn Signals Whelen M6 LED (2) 08-00-0606 i Turn Signal Located Below Headlights 08-00-0608 i Front Marker Light LED (2) 08-01-0303 i Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner) 08-01-0303 i Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1 1	RAC2 RAC2 RAC2 RAC2
04-08-0125 Front Grille Inlay, Black Honeycomb w/ stainless steel bars 06-03-2010 Fluid Checks & Fills at Grille L9 08-00-0503 Headlights, Quad, with Rectangular Bezel 08-00-0540 <> 08-00-0603 Headlight Location - Upper Bucket 08-00-0603 Front Turn Signals Whelen M6 LED (2) 08-00-0606 Turn Signal Located Below Headlights 08-00-0608 Front Marker Light LED (2) 08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1 1	RAC2 RAC2 RAC2
06-03-2010 Fluid Checks & Fills at Grille L9 08-00-0503 Headlights, Quad, with Rectangular Bezel 08-00-0540 <> 08-00-0603 Headlight Location - Upper Bucket 08-00-0603 Front Turn Signals Whelen M6 LED (2) 08-00-0606 Turn Signal Located Below Headlights 08-00-0606 Side Marker Light LED (2) 08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner) 08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1 1	RAC2 RAC2
08-00-0503 Headlights, Quad, with Rectangular Bezel08-00-0540< >08-00-0603 Headlight Location - Upper Bucket08-00-0603 Front Turn Signals Whelen M6 LED (2)08-00-0606 Turn Signal Located Below Headlights08-00-0606 Side Marker Light LED (2)08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner)08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1	RAC2
08-00-0503 Headlights, Quad, with Rectangular Bezel08-00-0540< >08-00-0603 Headlight Location - Upper Bucket08-00-0603 Front Turn Signals Whelen M6 LED (2)08-00-0606 Turn Signal Located Below Headlights08-00-0608 Side Marker Light LED (2)08-01-0303 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner)08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1	RAC2
08-00-0540< >08-00-0603 Front Turn Signals Whelen M6 LED (2)08-00-0630< >08-00-0606 Turn Signal Located Below Headlights08-00-0608 Side Marker Light LED (2)08-01-0303 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner)08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1 1	
08-00-0603 Front Turn Signals Whelen M6 LED (2)08-00-0630< >08-00-0606 Turn Signal Located Below Headlights08-00-0608 Side Marker Light LED (2)08-01-0303 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner)08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1 1	
08-00-0630< >08-00-0606 Side Marker Light LED (2)08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner)08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1 1	RAC2
08-00-0606 Side Marker Light LED (2)08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner)08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1	RAC2
08-00-0608 Front Marker Lamps Face Mounted LED (Center 3 Lightings, 2 Corner)08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel		RAC2
08-01-0303 Headlight & Marker Light Activated Rocker Switch Driver Panel	1	RAC2
	1	RAC2
CAB SIDE	1	RAC2
04.09.0451 Coh Fander Steislage Steel	1	DACO
04-08-0151 Cab Fender Stainless Steel	1	RAC2
04-09-0190 ==== No Stainless-Steel Rear Wall Cap - pick to select ====	1	RAC2
04-09-0300 Logo, Commander, Cab Sides	1	RAC2
04-10-0351 Mud Flaps Front	1	RAC2
CAB TILT	1	RAC2
05-00-0221 Cab Tilt System - Heavy Duty w/ Manual Back Up	1	RAC2
05-00-0021 Cab Tilt Limit Switch	1	RAC2
05-00-0045 Cab Tilt Lock Down Indicator	1	RAC2
05-00-0100 Cab Tilt Control Receptacle Temp	1	RAC2
REARVIEW MIRRORS	1	RAC2
05-00-5005 Bus Style Mirrors	1	RAC2
05-00-7130 Ramco-Bus-Drv Dr Mt (CRM-1350PCHR)-Off Dr Mt	1	RAC2
(CRM-1350PCHR)-H&R,H&R(LWR)CVX		
08-01-0821 Rearview Mirror Remote & Heat Switch Driver Panel	1	RAC2
EXTERIOR CAB PAINT	1	RAC2
05-01-5010 Cab Paint Exterior Single Color	1	RAC2
05-01-5010 Cab Paint Extend Single Color 05-01-5021 < > Cab Paint Lower / Primary	1	RAC2
05-01-6051 Cab Undercoating	1	RAC2 RAC2
05-01-7000 > Paint Spray Out	1	RAC2
FRONT AXLE	1	RAC2
07-05-010B Front Axle Hendrickson SteerTek 20000#	1	RAC2
07-05-0120 Front Wheel Bearing Lube Oil	1	RAC2
07-05-0272 Front Suspension Hendrickson Parabolic Spring 20K	1	RAC2
07-05-0341 Power Steering Gear TRW TAS 85 w/Assist- 20K and up - L9 Steertek Axle	1	RAC2
07-06-0420 Chassis Alignment	1	RAC2
07-06-0522 Front Cramp Angle 45 Degrees	1	RAC2
07-07-0160 (2) Front Tires 315/80R 22.5 L Goodyear G289 WHA	1	RAC2
07-06-0436 > Counter Acting Balancing Beads	2	RAC2
07-07-0717 > (2) Front Wheels Alcoa LvL One 22.5 x 9.00 Aluminum	1	RAC2
07-07-0940 ==== No Run Flat Tire Safety Ring ====	1	RAC2
07-07-0920 ==== No Front Full Wheel Cover ====	1	RAC2
07-07-0940 ==== No Run Flat Tire Safety Ring ====	1	RAC2
07-08-0203 Front Brakes Meritor EX225 Disc 17"	1	RAC2

04/21/2022 PART NO	S DESCRIPTION	QTY	Page ID
07-05-0314	4 Spoke Steering Wheel Tilt/Telescopic 18"	1	RAC2
	REAR AXLE	1	RAC2
07-06-0100	> Rear Axle, Single, 24000# Meritor RS-24-160	1	RAC2
07-06-0201	Rear Suspension Hendrickson FireMaax EX Air 24000#	1	RAC2
07-08-0253	> Rear Brakes Meritor EX225 Disc 17"	1	RAC2
07-06-0300	Rear Shock Absorbers	1	RAC2
07-06-0350	> Rear Axle Differential Control DCDL single	1	RAC2
08-01-0902	> Rear Axle Diff Control (DCDL) Activated Vista	1	RAC2
07-07-0301	(4) Rear Tires 11R 22.5 Michelin XZE2 "H"	1	RAC2
07-06-0436	> Counter Acting Balancing Beads	4	RAC2
07-07-0785	(4) Rear Wheels Alcoa LvL One 22.5 x 8.25 Aluminum	1	RAC2
07-07-0610	Valve Stem Extension - Single Axle	1	RAC2
07-07-0925	==== No Full Wheel Cover, Rear Wheel ====	1	RAC2
07-07-0994	S > Vehicle Top Speed 65-68 mph	1	RAC2
07-08-0101	< > Antilock Braking System Single Axle	1	RAC2
07-08-0189	Air Tank Brackets - Hot Dipped Galvanized	1	RAC2
07-08-0301	Park Brake Rear Wheels Only	1	RAC2
08-02-0130	Park Brake Control Driver Dash	1	RAC2
07-08-0410	Wabco System Saver 1200	1	RAC2
07-08-0551	Moisture Ejectors Manual	1	RAC2
07-08-0570	Air Supply Lines Nylon	1	RAC2
07-09-001B	> Frame Double Channel 35" Frame Width	1	RAC2
07-09-0035	< Wheelbase Range 190" - 199"	1	RAC2
07-09-0071	> Rear Overhang	1	RAC2
07-09-0137	Frame/Front Extension Hot Dip Galvanized	1	RAC2
08-09-0200	Galvanized Frame Warranty BR	1	RAC2
	ENGINE	1	RAC2
06-00-0050	Engine Placement	1	RAC2
06-00-1572	Engine, Cummins L9, Base Spec, 2017	1	RAC2
06-00-0051	Cummins L9 Surcharge	1	RAC2
06-00-1578	 > 450HP Cummins L9 - 2017 	1	RAC2
06-02-1110	Fan Clutch - L9	1	RAC2
06-04-3000	Fan Clutch Programming - Standard	1	RAC2
06-02-1526	> Auxiliary Engine Brake Compression Brake (JAKE)	1	RAC2
08-01-0202	> Auxiliary Engine Brake Control On/Off & Low/Med/High VISTA	1	RAC2
06-02-2003	AC Compressor - L9	1	RAC2
06-03-1010	Engine High Idle Speed 1250 RPM	1	RAC2
06-03-1023	Engine High Idle Control Manual & Automatic VISTA	1	RAC2
06-05-3010	Engine Air Intake Filtration and Restriction L9	1	RAC2
06-06-3732	Engine Exhaust System One Piece Officer Side DPF/SCR - L9 380 hp	1	RAC2
00.00.4000	& up -2017		DAGO
06-06-4006	DEF Tank - 2017	1	RAC2
06-06-4100	DEF Tank Access Fill Door	1	RAC2
06-08-0100	Engine Exh Acc Temp Mitigation	1	RAC2
06-08-0200 08-02-0140	Engine Exhaust Wrap	1	RAC2 RAC2
08-02-0140	I DPF Control Regeneration Switch & Inhibit Switch Covered I Engine Cooling System- L9	1	RAC2
	Coolant Valve Shut Off Valve w/Connection - For Additional Heater	1	RAC2
	Engine Pump Heat Exchanger L9	1	RAC2
06-04-2002 06-04-4010 06-05-1002			
06-04-4010	TRANSMISSION	1	RAC2
06-04-4010	TRANSMISSION	1	

07-02-0008 i= Transmission GEN V-E Push Button Key Pad 1 RAC2 07-02-0012 i= Transmission 1 o'dook PTO 1 RAC2 07-02-0052 i= Transmission Node Programming 5th Startup/5th Mode 1 RAC2 07-02-0052 i= Transmission Feature Programming 1/O Package 198/Pumper 1 RAC2 07-02-0251 i= Driveline Spicer 1710 HD 1 RAC2 07-04-0112 i= Fuel Fliter/Water Separator Cummins FS1098 1 RAC2 07-04-0216 i= Fuel Fliter/Water Separator Cummins FS1098 1 RAC2 07-04-0230 i= Fuel Startiof Valve (2) at Filter 1 RAC2 07-04-0230 i= Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 i= Alternator Delco Remy 275 Amp 1 RAC2 08-00-0100 i= Electrical System 12V DC Weldon V-MUX 1 RAC2 08-00-1054 i= Driver VISTA Display Weldon Vista IV 1 RAC2 08-00-2051 i= -e==No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 i= Neture enarly Switch Parel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0610 i= Neldon VDR/Seat Belt W	04/21/2022			Page 6
07-02-0008 iTransmission GEN V-E Push Button Key Pad 1 RAC2 07-02-0012 iTransmission Mode Programming Bit Startup/Sth Mode 1 RAC2 07-02-0052 iTransmission Mode Programming I/O Package 198/Pumper 1 RAC2 07-02-0056 iTransmission Feature Programming I/O Package 198/Pumper 1 RAC2 07-02-0051 i	PART NO S	DESCRIPTION	QTY	ID
07-02-0012 i= Transmission 1 of clock PTO 1 RAC2 07-02-0052 i= Transmission Mode Programming fist Startup/5th Mode 1 RAC2 07-02-0056 i= Transmission Feature Programming I/O Package 198/Pumper 1 RAC2 07-02-0251 i= Driveline Spicer 1710 HD 1 RAC2 07-04-0112 i= Fuel Filter/Water Separator Cummins FS1098 1 RAC2 07-04-0216 i= Fuel Tank So Gal189 Liter, Dual Fill 1 RAC2 07-04-0225 i= Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 i= Fuel Shutoff Valve (2) at Filter 1 RAC2 08-00-0403 i= Alternator Delco Remy 275 Amp 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-01-0054 i= Driver VISTA Display Weldon Vista IV 1 RAC2 08-02-0521 i= -===No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 i= Instrumentation Standard Gauge Panel 1 RAC2 08-00-0249 i= V-MUX WARRANTY - 4 YEAR 1 RAC2 08-01-01010 i= Instrumentation Standard Gauge Panel 1 <t< td=""><td>07-01-0500</td><td> Transmission Fluid - Standard</td><td>1</td><td>RAC2</td></t<>	07-01-0500	Transmission Fluid - Standard	1	RAC2
07-02-0052 i= Transmission Mode Programming 5th Startup/5th Mode 1 RAC2 07-02-0056 i= Transmission Fadure Programming I/O Package 198/Pumper 1 RAC2 07-02-0051 i= Driveline Spicer 1710 HD 1 RAC2 07-02-0151 i= Driveline Spicer 1710 HD 1 RAC2 07-04-0112 i= Fuel Flitter/Water Separator Cummins FS1098 1 RAC2 07-04-0216 i= Fuel Startup / Valve (2) at Filter 1 RAC2 07-04-0230 i= Fuel Startup / Valve (2) at Filter 1 RAC2 07-04-0230 i= Alternator Delco Remy 275 Amp 1 RAC2 08-00-0403 i= Alternator Delco Remy 275 Amp 1 RAC2 08-00-050 i= Driver Panei / Switch Panei (6 Switches) Under the Vista Screen 1 RAC2 08-01-054 i= Driver Panei / Switch Panei (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 i= e===No PWR Cable for Additional Pwr Studs===== 1 RAC2 08-02-0521 i= Instrumentation Backlighting Red 1 RAC2 08-00-0236 i= Batteries (4) Group 31 1 RAC2 08-00-0237 i= Battery Rox Driver/Officer	07-02-0008	Transmission GEN V-E Push Button Key Pad	1	RAC2
07-02-0066 i= Transmission Feature Programming I/O Package 198/Pumper 1 RAC2 07-02-0251 i= Driveline Spicer 1710 HD 1 RAC2 07-04-0112 i= Fuel Tank 50 Gal/189 Liter, Dual Fill 1 RAC2 07-04-0216 i= Fuel Tank 50 Gal/189 Liter, Dual Fill 1 RAC2 07-04-0216 i= Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 i= Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 i= Alternator Delco Remy 275 Amp 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-00-054 i= Driver VIST Display Weldon Vista IV 1 RAC2 08-01-0054 i= Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 i= ===No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 i= Instrumentation Standard Gauge Panel 1 RAC2 08-00-0326 i= Battery Roy Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0231 4 Battery System 1 RAC2 1 RAC2 08-00-02326 <td< td=""><td>07-02-0012</td><td> Transmission 1 o'clock PTO</td><td>1</td><td>RAC2</td></td<>	07-02-0012	Transmission 1 o'clock PTO	1	RAC2
07-02-0251 i – Driveline Spicer 1710 HD 1 RAC2 07-04-0112 i – Fuel Filter/Water Separator Cummins FS1098 1 RAC2 07-04-0112 i – Fuel Tank 50 Gal/189 Liter, Dual Fill 1 RAC2 07-04-0216 i – Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 i – Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 i – Alternator Delco Remy 275 Amp 1 RAC2 08-00-0403 i – Alternator Delco Remy 275 Amp 1 RAC2 08-00-050 i – Driver Pinel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-01-054 i – Driver Pinel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 i – ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0521 i – Instrumentation Backlighting Red 1 RAC2 08-02-0521 i – Instrumentation Backlighting Red 1 RAC2 08-00-0236 i – Batteries (4) Group 31 1 RAC2 08-00-0237 i – Battery Switch 1 RAC2	07-02-0052	Transmission Mode Programming 5th Startup/5th Mode	1	RAC2
07-02-0251 i – Driveline Spicer 1710 HD 1 RAC2 07-04-0112 i – Fuel Filter/Water Separator Cummins FS1098 1 RAC2 07-04-0112 i – Fuel Tank 50 Gal/189 Liter, Dual Fill 1 RAC2 07-04-0216 i – Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 i – Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 i – Alternator Delco Remy 275 Amp 1 RAC2 08-00-0403 i – Alternator Delco Remy 275 Amp 1 RAC2 08-00-050 i – Driver Pinel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-01-054 i – Driver Pinel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 i – ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0521 i – Instrumentation Backlighting Red 1 RAC2 08-02-0521 i – Instrumentation Backlighting Red 1 RAC2 08-00-0236 i – Batteries (4) Group 31 1 RAC2 08-00-0237 i – Battery Switch 1 RAC2	07-02-0066		1	RAC2
07-04-0112 - Fuel Filter/Water Separator Cummins FS1098 1 RAC2 07-04-0310 - Fuel Tank 50 Gal/189 Liter, Dual Fill 1 RAC2 07-04-0216 - Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 - Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 - Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 - Alternator Delco Remy 275 Amp 1 RAC2 08-00-0403 - Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0050 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-01-0054 - Driver VISTA Display Weldon Vista IV 1 RAC2 08-02-0521 - =====No PWR Cable for Additional Pwr Studs===== 1 RAC2 08-02-0521 - =====No PWR Cable for Additional Pwr Studs===== 1 RAC2 08-02-0521 - =====No PWR Cable for Additional Pwr Studs===== 1 RAC2 08-01-0100 - Instrumentation Standard Gauge Panel 1 RAC2 08-01-0215 - Instrumentation Backlighting Red 1 RAC2 08-00-0231 4 Battery System 1 RAC2 08-00-0249 - Battery Cables (A) 1 RAC2 08-00-0241 + Battery Tuper Studs Front Dri	07-02-0251		1	RAC2
07-04-0310 Fuel Tank 50 Gal/189 Liter, Dual Fill 1 RAC2 07-04-0216 Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 Fuel Cooler Behind Battery Box 1 RAC2 07-04-0230 Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 Alternator Deloc Remy 275 Amp 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-01-0050 Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0050 Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-01-0051 Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 ====NO PWR Cable for Additional Pwr Studs===== 1 RAC2 08-02-0610 Instrumentation Backlighting Red 1 RAC2 08-02-0610 Battery System 1 RAC2 08-00-226 - Batteries (4) Group 31 1 RAC2 08-00-226 - Batteries Youth Font Driver Lower Step 1 RAC2 08-00-0227 - Batteries Quis Font Driver Lower Step 1<				
07-04-0310 Fuel Tank 50 Gal/189 Liter, Dual Fill 1 RAC2 07-04-0216 Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 Fuel Cooler Behind Battery Box 1 RAC2 07-04-0230 Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 Alternator Deloc Remy 275 Amp 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-01-0050 Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0050 Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-01-0051 Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 ====NO PWR Cable for Additional Pwr Studs===== 1 RAC2 08-02-0610 Instrumentation Backlighting Red 1 RAC2 08-02-0610 Battery System 1 RAC2 08-00-226 - Batteries (4) Group 31 1 RAC2 08-00-226 - Batteries Youth Font Driver Lower Step 1 RAC2 08-00-0227 - Batteries Quis Font Driver Lower Step 1<	07-04-0112	I Fuel Filter/Water Separator Cummins FS1098	1	RAC2
07-04-0216 I - Fuel Lines Aramid Braid 1 RAC2 07-04-0230 I - Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 I - Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 I - Alternator Delco Remy 275 Amp 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon VMUX 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon VMUX 1 RAC2 08-01-0054 I - Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0054 I - Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 I - e===No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 I - Instrumentation Standard Gauge Panel 1 RAC2 08-01-015 I - Instrumentation Backlighting Red 1 RAC2 08-01-010 I - Instrumentation Backlighting Red 1 RAC2 08-00-0227 I - Batteries (4) Group 31 1 RAC2 08-00-0227 I - Battery Gabies (4) 1 RAC2 08-01-0036 I - Ingition Switch 1 RAC2 08-01-			1	
07-04-0225 i - Fuel Shutoff Valve (2) at Filter 1 RAC2 07-04-0230 i - Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 i - Alternator Delco Remy 275 Amp 1 RAC2 08-00-1000 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-00-10050 i - Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0054 i - Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-0521 i - ====No PWR Cable for Additional Pwr Studs===== 1 RAC2 08-02-0610 i - Instrumentation Standard Gauge Panel 1 RAC2 08-01-0125 i - Instrumentation Backlighting Red 1 RAC2 08-00-0249 i - V-MUX WARANTY - VISTA 1 RAC2 08-02-0511 i - Instrumentation Backlighting Red 1 RAC2 08-01-0125 i - Instrumentation Backlighting Red 1 RAC2 08-00-0236 i - Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0251 i - Battery Mare - Driver'S Kick Plate 1 RAC2 08-00-0251 i - Battery Sox Driver/Officer Sid				
07-04-0230 i – Fuel Cooler Behind Battery Box 1 RAC2 08-00-0403 i – Alternator Delco Remy 275 Amp 1 RAC2 ELECTRICAL SYSTEM 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-01-0050 i – Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0054 i – Driver Panel / Switch Panel (Switches) Under the Vista Screen 1 RAC2 08-02-0521 i – ***********************************			-	
08-00-0403 Alternator Delco Remy 275 Amp 1 RAC2 ELECTRICAL SYSTEM 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-00-0050 Driver VISTA Display Weldon V-MUX 1 RAC2 08-01-0054 Driver Panel / Switch Panel (5 Switches) Under the Vista Screen 1 RAC2 08-09-0249 V-MUX WARRANTY - 4 YEAR 1 RAC2 08-02-0521 sers=No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 Instrumentation Standard Gauge Panel 1 RAC2 08-00-0326 Battery Son Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0271 Battery Tox Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0251 Battery Tox Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 1 RAC2				
ELECTRICAL SYSTEM 1 RAC2 08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-01-0050 - Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0054 - Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-02-054 - V-MUX WARRANTY - 4 YEAR 1 RAC2 08-02-0521 - ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 - Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0110 - Instrumentation Standard Gauge Panel 1 RAC2 08-01-025 - Instrumentation Backlighting Red 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-027 - Batteries (4) Group 31 1 RAC2 08-00-0249 - Battery Cables (4) 1 RAC2 08-01-0034 - Position Battery Master - Driver's Kick Plate 1 RAC2 08-00-0271 - Battery Cables (4) 1 RAC2 08-01-0034 - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0034 - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0034 - Power & Ground Stud 40A Batt Direct / 15A Ignition 1 <t< td=""><td>01 04 0200</td><td></td><td></td><td>10102</td></t<>	01 04 0200			10102
08-00-0100 > Electrical System 12V DC Weldon V-MUX 1 RAC2 08-01-0054 - Driver VISTA Display Weldon Vista IV 1 RAC2 08-00-0249 - V-MUX WARRANTY - 4 YEAR 1 RAC2 08-02-0521 - ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 - =weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 - Instrumentation Standard Gauge Panel 1 RAC2 08-00-0326 - Battery System 1 RAC2 08-00-0326 - Battery Cables (4) 1 RAC2 08-00-0249 - Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-00-0326 - Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-00-0249 - Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-00-0251 - Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0036 - Ipower & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-01-0036 - Ipower & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-01-0036 - Power & Ground Stud 40A Batt Direct / 15A Ignition </td <td>08-00-0403</td> <td> Alternator Delco Remy 275 Amp</td> <td>1</td> <td>RAC2</td>	08-00-0403	Alternator Delco Remy 275 Amp	1	RAC2
08-01-0050 Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0054 Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-09-0249 V-MUX WARRANTY - 4 YEAR 1 RAC2 08-02-0521 ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 Instrumentation Standard Gauge Panel 1 RAC2 08-00-0326 Battery System 1 RAC2 08-00-0326 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-00-026 Battery Jumper Studs Front Driver Skick Plate 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Skick Plate 1 RAC2 08-01-0034 - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0036 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-00-0732 Cab Step Lig		ELECTRICAL SYSTEM	1	RAC2
08-01-0050 Driver VISTA Display Weldon Vista IV 1 RAC2 08-01-0054 Driver Panel / Switch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-09-0249 V-MUX WARRANTY - 4 YEAR 1 RAC2 08-02-0521 ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 Instrumentation Standard Gauge Panel 1 RAC2 08-00-0326 Battery System 1 RAC2 08-00-0326 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-00-026 Battery Jumper Studs Front Driver Skick Plate 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Skick Plate 1 RAC2 08-01-0034 - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0036 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-00-0732 Cab Step Lig	08-00-0100	> Electrical System 12V DC Weldon V-MUX	1	RAC2
08-01-0054 Driver Panel / Świtch Panel (6 Switches) Under the Vista Screen 1 RAC2 08-09-0249 V-MUX WARRANTY - 4 YEAR 1 RAC2 08-09-0249 V-MUX WARRANTY - 4 YEAR 1 RAC2 08-02-0521 ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 Instrumentation Standard Gauge Panel 1 RAC2 08-01-0010 Instrumentation Backlighting Red 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-0227 Battery Cables (4) Group 31 1 RAC2 08-00-0236 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-00-0249 Battery Jumper Studs Front Driver's Kick Plate 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0036 Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights Activation with Park Brake 1			-	
08-09-0249 I - V-MUX WARRANTY - 4 YEÀR 1 RAC2 08-02-0521 I - ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 I - Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 I - Instrumentation Standard Gauge Panel 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-0227 I - Battery Cables (4) 1 RAC2 08-00-0251 I - Battery Cables (4) 1 RAC2 08-00-0251 I - Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 I - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0034 I - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 I - Instrumentation Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-01-0036 I - Ionition Switch 1 RAC2 1 RAC2 08-00-0721 I - Ground Lights LED Whelen 3SC0CDCR 1 RAC2 1 RAC2				
08-02-0521 - ====No PWR Cable for Additional Pwr Studs==== 1 RAC2 08-02-0610 - Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 - Instrumentation Standard Gauge Panel 1 RAC2 08-01-0125 - Instrumentation Backlighting Red 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-0326 - Batteries (4) Group 31 1 RAC2 08-00-0227 - Battery Cables (4) 1 RAC2 08-00-0251 - Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-00-0261 - Battery Jumper Studs Front Driver's Kick Plate 1 RAC2 08-00-0251 - Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 - Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 - Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-00-0732 - Cab Step Lights LED (1 Per Step) 1 RAC2 08-00-0732 - Cab Step Lights Activated Respective Side 1 RAC2			1	
08-02-0610 - Weldon VDR/Seat Belt Warn - VISTA 1 RAC2 08-01-0010 - Instrumentation Standard Gauge Panel 1 RAC2 08-01-0125 - Instrumentation Backlighting Red 1 RAC2 08-00-0326 - Battery System 1 RAC2 08-00-0326 - Battery Sox Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0277 - Battery Cables (4) 1 RAC2 08-00-0281 - Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0034 - 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 - Ignition Switch 1 RAC2 08-00-0721 - Ground Lights LED Whelen 3SCOCDCR 1 RAC2 08-00-0751 - Cab Step Lights LED (1 Per Step) 1 RAC2 08-00-0732 - Cab Step Lights LED (1 Per Step) 1 RAC2 08-00-10753 - Step Lights Activated Respective Side 1 RAC2	00-03-0243		1	TAO2
08-01-0010 08-01-0125 Instrumentation Standard Gauge Panel Instrumentation Backlighting Red1RAC2 RAC208-01-0125 Instrumentation Backlighting Red1RAC2 RAC208-00-03414 Battery System Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers Battery Jumper Studs Front Driver Lower Step Battery Jumper Studs Front Driver Lower Step Battery Jumper Studs Front Driver Lower Step Ignition Switch Ignition Switch Power & Ground Stud 40A Batt Direct / 15A Ignition1RAC2 RAC208-00-0721 08-01-0751 Ground Lights LED Whelen 3SC0CDCR Ground Lights Activation with Park Brake1RAC2 RAC208-00-0732 08-01-0753 Cab Step Lights LED (1 Per Step) Step Lights Activated Respective Side1RAC2 RAC2	08-02-0521	====No PWR Cable for Additional Pwr Studs====	1	RAC2
08-01-0010 08-01-0125 Instrumentation Standard Gauge Panel Instrumentation Backlighting Red1RAC2 RAC208-01-0125 Instrumentation Backlighting Red1RAC2 RAC208-00-03414 Battery System Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers Battery Jumper Studs Front Driver Lower Step Battery Jumper Studs Front Driver Lower Step Battery Jumper Studs Front Driver Lower Step Ignition Switch Ignition Switch Power & Ground Stud 40A Batt Direct / 15A Ignition1RAC2 RAC208-00-0721 08-01-0751 Ground Lights LED Whelen 3SC0CDCR Ground Lights Activation with Park Brake1RAC2 RAC208-00-0732 08-01-0753 Cab Step Lights LED (1 Per Step) Step Lights Activated Respective Side1RAC2 RAC2				
08-01-0125 Instrumentation Backlighting Red 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-0326 Batteries (4) Group 31 1 RAC2 08-00-0227 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0249 Battery Cables (4) 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2	08-02-0610	Weldon VDR/Seat Belt Warn - VISTA	1	RAC2
08-01-0125 Instrumentation Backlighting Red 1 RAC2 08-00-0341 4 Battery System 1 RAC2 08-00-0326 Batteries (4) Group 31 1 RAC2 08-00-0227 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0249 Battery Cables (4) 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2				
08-00-0341 4 Battery System 1 RAC2 08-00-0326 Batteries (4) Group 31 1 RAC2 08-00-0227 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0249 Battery Cables (4) 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2			1	
08-00-0326 Batteries (4) Group 31 1 RAC2 08-00-0227 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0249 Battery Cables (4) 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-00-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2	08-01-0125	Instrumentation Backlighting Red	1	RAC2
08-00-0326 Batteries (4) Group 31 1 RAC2 08-00-0227 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0249 Battery Cables (4) 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-00-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2	08-00-03/1	1 Battery System	1	RAC2
08-00-0227 Battery Box Driver/Officer Side Hot Dipped Galvanized Steel w/Covers 1 RAC2 08-00-0249 Battery Cables (4) 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2				
08-00-0249 Battery Cables (4) 1 RAC2 08-00-0251 Battery Jumper Studs Front Driver Lower Step 1 RAC2 08-01-0034 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2			1	
08-00-0251			1	
08-01-0034 i 2 Position Battery Master - Driver's Kick Plate 1 RAC2 08-01-0036 i Ignition Switch 1 RAC2 08-01-0040 > i Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 i Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 i Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 i Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 i Step Lights Activated Respective Side 1 RAC2			1	
08-01-0036 Ignition Switch 1 RAC2 08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2				
08-01-0040 > Power & Ground Stud 40A Batt Direct / 15A Ignition 1 RAC2 08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2			-	
08-00-0721 Ground Lights LED Whelen 3SC0CDCR 1 RAC2 08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2			-	
08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2	08-01-0040	> Power & Ground Stud 40A Balt Direct / TSA Ignition		NA02
08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2				
08-01-0751 Ground Lights Activation with Park Brake 1 RAC2 08-00-0732 Cab Step Lights LED (1 Per Step) 1 RAC2 08-01-0753 Step Lights Activated Respective Side 1 RAC2	08-00-0721	Ground Lights LED Whelen 3SC0CDCR	1	RAC2
08-01-0753 Step Lights Activated Respective Side 1 RAC2	08-01-0751		1	
08-01-0753 Step Lights Activated Respective Side 1 RAC2				
	08-00-0732			
DOOR JAMB WARNING LIGHTS 1 RAC2	08-01-0753	Step Lights Activated Respective Side	1	RAC2
DOOR JAMB WARNING LIGHTS 1 RAC2				
		DOOR JAMB WARNING LIGHTS	1	RAC2

04/21/2022 PART NO S	DESCRIPTION	QTY	Page 7 ID
08-00-0783	Engine Compartment Work Light LED (2)	1	
08-00-0791	Interior Overhead LED Lighting - Red/Clear	1	RAC2
08-00-4090 08-01-2010	> Dr Open/Hazard Wrn Lt, Flash, Whelen 3SR00FRR LED Rnd (Do Not Move Appar Back-Up Alarm Ecco 575	1	RAC2 RAC2
08-06-0022	Camera System with V-Mux	1	
08-06-0011 08-06-0160 08-08-BS40	Camera System - Chrome Side Cameras Driver & Officer Side Cameras, Rear Camera; Driver Vista	1	RAC2 RAC2 RAC2
08-08-0001 08-08-0201 08-08-20BR 08-08-06WW 08-08-10BS 08-08-0022 08-08-41CS	Blue Sea P12 Battery Charger w/ EV 7517 Indicator Battery Charger Location - Behind Driver's Seat Blue Sea Automatic Shoreline - 20 Amp Shoreline, Sure Eject, 20A, Red < > Shoreline Locations Driver's Side Above Wheel Well Air Brake Cmprsr, Blue Sea, 12V Air Compressor Location - Behind Officer's Seat < > Indicator Location Canopy Window - Commander		RAC2 RAC2 RAC2 RAC2